



# DAST80032 OC Sentry™ System

## QUICK INSTALLATION GUIDE

info@radar-electronics.com  
 http://radar-electronics.com  
 Phone: +386 3 4900 800



**1 Before You Start**

**Contents:**  
 ST82032 Sensor (3M X 2M) (1)  
 Sensor Mounting Hardware (1)  
 Sensor Bracket SD-BK90 (1)  
 A/BK Hardware Kit (1)  
 CD6102 OC Display (1)  
 Display Mounting Hardware  
 SAS97DT 97dB Dual Tone (Safety Alert System)  
 Mounting Hardware A/BK (1)  
 Cable (1)  
 HRPV410T Cable 25' / 7.6M (1)  
 SAS INT Interconnect Cable 43"/1.09M (1)  
 User Manual

**2 Mount Sensor**

Select a location for the sensor approximately 3ft/1M from the ground. Ideally the sensor should be centered on the rear of the vehicle.

**Important!**  
 Before the PreView® Sensor is permanently installed to the vehicle, verify the selected location provides a clear detection zone. Temporarily attach the sensor in the proposed location, apply power to the system, and verify nothing is detected.

**Mounting**  
 Using the bracket, scribe position marks through the holes and drill 1/4" (6mm) holes centered at the marks. A 1" diameter clearance hole is required for the sensor connector and the mating cable. Secure the sensor to the vehicle with the hardware. Apply a maximum of 22 lb-inch to secure the sensor.

**3 Install Alarm**

SAS—Safety Alert System. Remove existing back up alarm and mount the SAS Alarm in the same location or in close proximity.

**4 Install Cables**


Routing the transition cable and sensor should start at the rear and end in the cab. To enter the cab, drill a 1" (24mm) hole and feed the display connector through.

**The sensor mating connector is fully waterproof if mated properly. The connectors with a collar (coupling ring) must be turned to the right until they lock with the mating connector.) Do not route cable next to heat sources or area that may see abrasion or rock and debris damage.**

**5 Mount Display**

Mount the display in a location that is easily viewed by the driver during vehicle operation. Possible locations for the display is on the dash or by either windshield pillar. Drill Template and hardware supplied.

Not all hardware shown

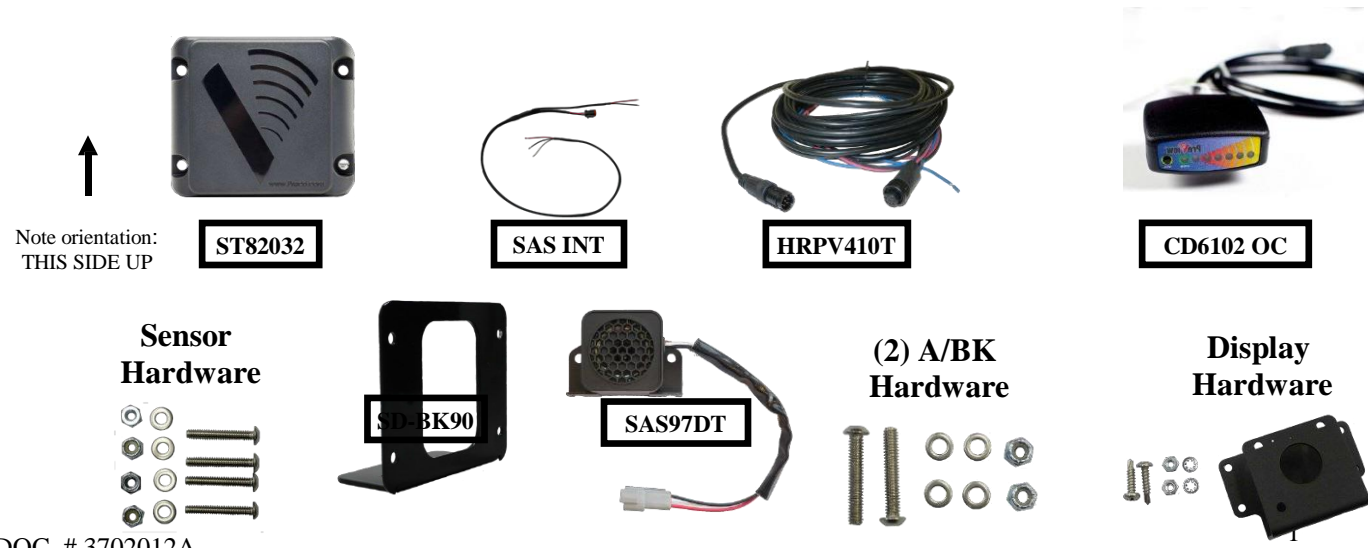

Detailed Wiring Diagram



Back Page

Contact Technical Support with Questions:

Telephone: +386 3 4900 800  
 Email: info@radar-electronic.com  
 http://radar-electronics.com



# DAST80032 OC Sentry™ System

## QUICK INSTALLATION GUIDE

info@radar-electronics.com  
<http://radar-electronics.com>  
Phone: +38634900800



The quick install guide is only a supplement to the product manuals. Please read all of the manuals for complete information and instructions before installing the product.



# DAST80032 OC Sentry™ System

## QUICK INSTALLATION GUIDE

info@radar-electronics.com  
http://radar-electronics.com  
Phone: +386 34900800




### Initial System Power Up and Test

Once the sensor, display, and SAS alarm are installed, wired and connected, power should be applied to test system operation. The vehicle must be placed in reverse to power up the system and the green status LED will be the only light illuminated (the 3rd yellow LED may flash once). The SAS alarm should also begin sounding and increase in rate with the detection of an object. If any of the detection (yellow) LED's are lit or the SAS alarm is indicating a detection, check for any objects which may be detected by the sensors. If possible, move the sensors so they do not detect the object(s). If it is not possible to relocate the sensors contact PRECO Electronics®.

If for some reason the system is malfunctioning, the status LED will turn from green to red, one of the yellow LEDs will be illuminated, and the buzzer will emit a short stutter sound. Refer to the Troubleshooting section in the display manual to determine the error and potential causes.

Once the system has been installed and verified, the detection zone should be tested. The test should be performed with two people, one who remains in the cab (the operator), and one who walks through the sensor field to the rear of the vehicle (the assistant). The operator engages the parking brake, presses the vehicle brake, and places the vehicle in reverse. The assistant then walks through the detection zone while the operator notes where the display buzzer activates or SAS alarm indicates a detection. An accurate detection zone can be mapped by moving about the rear of the vehicle and noting when the display buzzer activates. The assistant could also map the detection area instead of the operator by noting where the alarm increases in rate. **NOTE: Assistant should wear hearing protection to prevent hearing damage as the SAS alarm is very loud.**

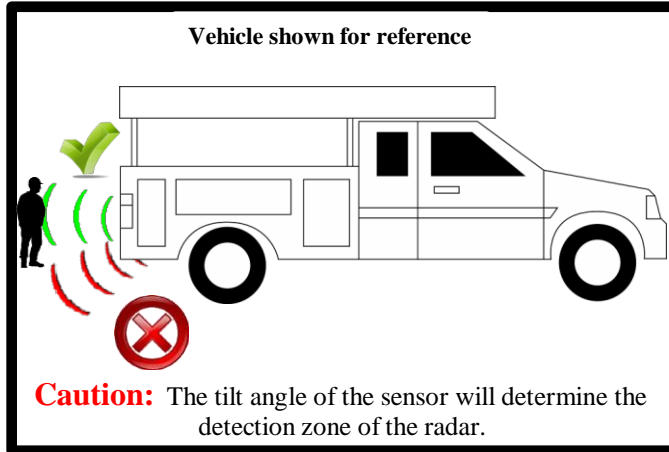


The PreView® system is a blind spot collision warning system designed to supplement other safety practices and/or devices. The machine operator is always the first line of defense when safely operating a vehicle.

### TESTING / MAINTENANCE

Test the PreView® Radar System every day for functionality and performance prior to vehicle operation, refer to the sensor manual.

Allow a small service loop in the cables at the display or sensor and secure the cables every few feet (~1M) with tie wraps.

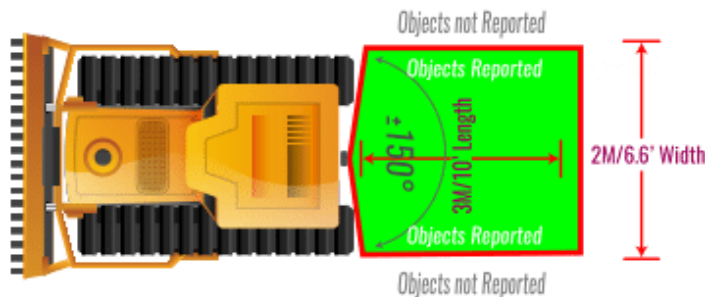

APPROXIMATE PATTERN SHOWN

