



# SAS615-97-OC WorkSight® System

info@radar-electronics.com  
 http://radar-electronics.com  
 Phone: +386 3 4900 800



## QUICK INSTALLATION GUIDE

**1 Before You Start**

**Contents:**  
 WS6215 Sensor (1)  
 Sensor Mounting Hardware (1)  
 CD6102 OC Display (1)  
 Display Mounting Hardware  
 SAS97DT 97dB Dual Tone (Safety Alert System)  
 Mounting Hardware A/BK (1)  
 Cables (2)  
 WSAS INT Cable 4’/1.2M (1)  
 WSAS610T Transition Cable 30’ / 9.1M (1)

User Manuals and Drill Template

**2 Mount Sensor**

Select a location for the sensor approximately 3ft/1M from the ground. Ideally the sensor should be centered on the rear of the vehicle.

**Important!**  
 Before the PreView Sensor is permanently installed to the vehicle, verify the selected location provides a clear detection zone. Temporarily attach the sensor in the proposed location, apply power to the system, and verify nothing is detected.

**Mounting**  
 The sensor may be mounted directly on the vehicle or attached using a bracket. Using the drill template, scribe position marks through the holes and drill 1/4” (6mm) holes centered at the marks. A 1 1/2” diameter clearance hole is required for the sensor connector and the mating cable. Secure the sensor to the vehicle with the supplied hardware. Apply a maximum of 22 in-lbs to secure the sensor.

**3 Install Alarm**  
 SAS—Safety Alert System. Remove existing back up alarm and mount the SAS Alarm in the same location or in close proximity.

**4 Install Cables**  
 Routing the cable should start at the back of the vehicle and end in the cab. To enter the cab, drill a 1” (24mm) hole and feed the connector through to the display.

**Important!**  
**The sensor mating connector is fully waterproof if mated properly. The connectors with a collar (coupling ring) must be turned to the right until they lock with the mating connector. Latch(es) on mating connector must click (locking connectors together). Do not route cable next to heat sources or area that may see abrasion or rock and debris damage. Bundle and store any excess cable.**

**5 Mount Display**  
 Mount the display in a location that is easily viewed by the driver during vehicle operation. Possible locations for the display is on the dash or by either windshield pillar. Drill Template and hardware supplied.

Not all hardware shown

Note orientation:  
THIS SIDE UP



WS6215



WSAS-INT



WSAS610T



CD6102 OC

Sensor Hardware



SAS97DT



A/BK Alarm Hardware



Display Hardware



Detailed Wiring Diagram



Back Page

Contact Technical Support with Questions:  
 Telephone: +386 3 4900 800  
 Email: info@radar-electronic.com  
 http://radar-electronics.com

The quick install guide is only a supplement to the product manuals. Please read all of the manuals for complete information and instructions before installing the product.



# SAS615-97-OC WorkSight® System

## QUICK INSTALLATION GUIDE

info@radar-electronics.com  
 http://radar-electronics.com  
 Phone: +38634900800




### Initial System Power Up and Test

Once the sensor, display, and SAS alarm are installed, wired and connected, power should be applied to test system operation. The vehicle must be placed in reverse to power up the system and the green status LED will be the only light illuminated (the 3rd yellow LED may flash once). The SAS alarm should also begin sounding and increase in rate with the detection of an object. If any of the detection (yellow) LED's are lit or SAS alarm is indicating a detection and there is no object in the machine's vicinity, check for any objects on the machine which may be detected by the sensor. If possible, move the sensor so it does not detect the object(s). If it is not possible to relocate the sensor contact PRECO Electronics®.

If for some reason the system is malfunctioning, the status LED will turn from green to red, one of the yellow LEDs will be illuminated indicating a failure. Refer to the Troubleshooting section in the manual to determine the error and potential causes.

Once the system has been installed and verified, the detection zone should be tested. The test should be performed with two people, one who remains in the cab (the operator), and one who walks through the sensor field to the rear of the vehicle (the assistant). The operator engages the parking brake, presses the vehicle brake, and places the vehicle in reverse. The assistant then walks through the detection zone while the operator notes where the display buzzer activates. An accurate detection zone can be mapped by moving about the rear of the vehicle and noting when the display indicates a detection. The assistant could also map the detection area instead of the operator by noting where the alarm changes tone. **NOTE: Assistant should wear hearing protection to prevent hearing damage as the SAS alarm is very loud.**

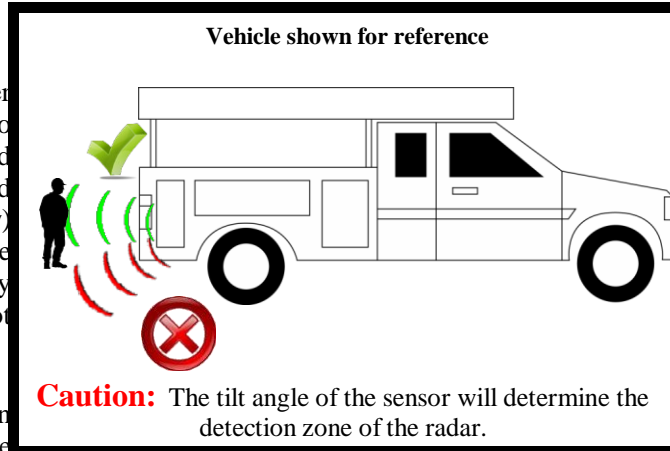

The PreView® system is a blind spot collision warning system designed to supplement other safety practices and/or devices. The machine operator is always the first line of defense when safely operating a vehicle.

### TESTING / MAINTENANCE

Test the PreView® Radar System every day for functionality and performance prior to vehicle operation, refer to the sensor manual.

Allow a small service loop in the cables at the display or sensor and secure the cables every few feet (~1M) with tie wraps.

