



PCSAS615-45B PreView® System

QUICK INSTALLATION GUIDE

info@radar-electronics.com
http://radar-electronics.com
Phone: +386 3 4900 800



1 Before You Start

Contents:
 WS6215 Sensor (1)
 Sensor Mounting Hardware (1)
 WSZ-BK90 Sensor Bracket, A/BK Mounting Hardware (1)
 SAS Alarm (1) 87-112dB Alarm (Safety Alert System)
 A/BK Mounting Hardware (1)
 Cables (2)
 WSAS INT Cable 4’/1.2M (1),
 WSAS6145PT Transition Cable 45’ / 13.7M (1)
 PVP710 Monitor with mounting hardware and bracket (1)
 CPK732 Camera / Cable with mounting hardware and bracket (1)
 CPC700 Camera and DDC023C cable (1 each)
 User Manuals and Drill Template

2 Mount Sensor

Select a location for the sensor approximately 3ft/1M from the ground. Ideally the sensor should be centered on the rear of the vehicle.

Important!
 Before the PreView Sensor is permanently installed to the vehicle, verify the selected location provides a clear detection zone. Temporarily attach the sensor in the proposed location, apply power to the system, and verify nothing is detected.

Mounting
 The sensor may be mounted directly on the vehicle or attached using the supplied bracket. Using the drill template, scribe position marks through the holes and drill 1/4” (6mm) holes centered at the marks. A 1 1/2” diameter clearance hole is required for the sensor connector and the mating cable. Secure the sensor to the vehicle with the supplied hardware. Apply a maximum of 22 in-lbs to secure the sensor.


3 Install Alarm
 SAS—Safety Alert System. Remove existing back up alarm and mount the SAS Alarm in the same location or in close proximity.

4 Install Cables
 Routing the body harness and camera cable should start at the rear of the vehicle and end in the cab. To enter the cab, drill a 1” (24mm) hole and feed the connectors through to the monitor.

Important!
 The sensor mating connector is fully waterproof if mated properly. **The connectors with a collar (coupling ring) must be turned to the right until they lock with the mating connector. Latch(es) on mating connector must click (locking connectors together).** Do not route cable next to heat sources or area that may see abrasion or rock and debris damage. Bundle and store any excess cable.

5 Mount Monitor and Camera
 Mount the monitor in a location easily viewed by the driver. Mount the camera on the rear of the vehicle to achieve the best possible view of the area.

Not all hardware shown

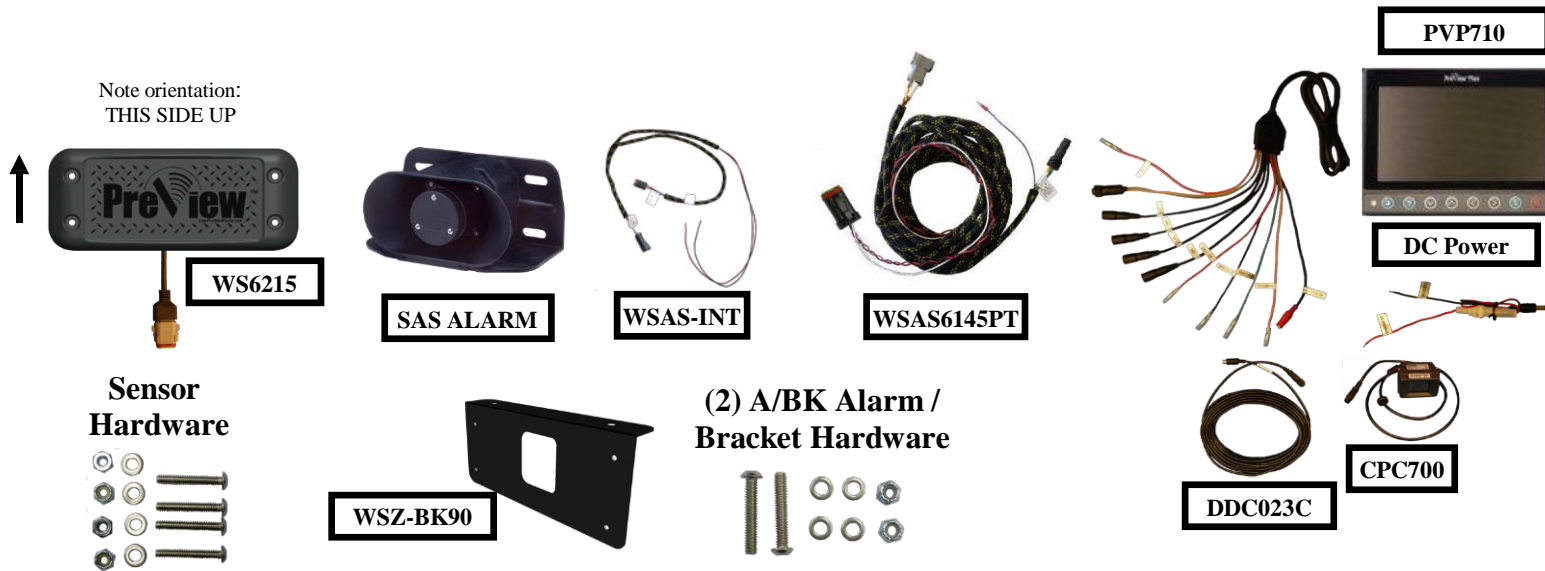

Detailed Wiring Diagram



Back Page

Contact Technical Support with Questions:
 Telephone: +386 3 4900 800
 Email: info@radar-electronic.com
 http://radar-electronics.com

The quick install guide is only a supplement to the product manuals. Please read all of the manuals for complete information and instructions before installing the product.



PCSAS615-45B PreView[®] System

QUICK INSTALLATION GUIDE

info@radar-electronics.com
 http://radar-electronics.com
 Phone: +386 34900 800



Initial System Power Up and Test


Once the sensor, camera system, and SAS alarm are installed, wired and connected, power should be applied to test system operation. The monitor should power up and display the camera view. The vehicle must be placed in reverse to power up the sensor and alarm. The SAS alarm should also begin sounding and increase in volume with the detection of an object. If the monitor or SAS alarm is indicating a detection and there is no object in the machine's vicinity, check for any objects on the machine which may be detected by the sensor. If possible, move the sensor so it does not detect the object(s). If it is not possible to relocate the sensor contact PRECO Electronics[®].



If for some reason the system is malfunctioning, the will change to a yellow triangle indicating a failure. Refer to the Troubleshooting section in the monitor manual to determine the error and potential causes.

Once the system has been installed and verified, the detection zone should be tested. The test should be performed with two people, one who remains in the cab (the operator), and one who walks through the sensor field to the rear of the vehicle (the assistant). The operator engages the parking brake, presses the vehicle brake, and places the vehicle in reverse. The assistant then walks through the detection zone while the operator notes where the monitor displays a detection. An accurate detection zone can be mapped by moving about the rear of the vehicle and noting when the monitor


the alarm increases in volume. **NOTE: Assistant should wear hearing protection to prevent hearing damage as the SAS alarm is very loud.**

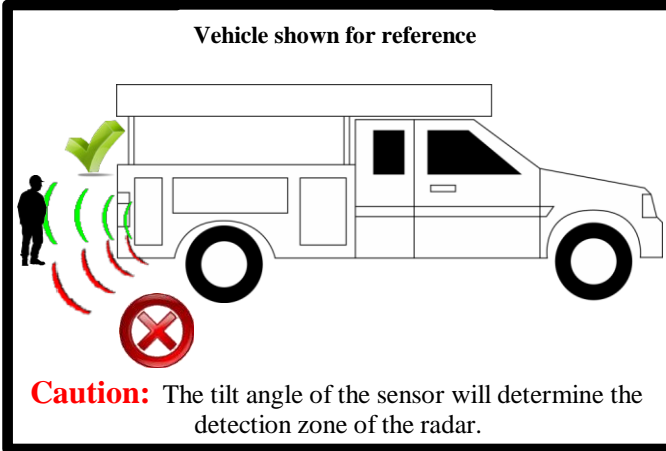

The PreView[®] system is a blind spot collision warning system designed to supplement other safety practices and/or devices. The machine operator is always the first line of defense when safely operating a vehicle.

TESTING / MAINTENANCE

Test the PreView[®] Radar System every day for functionality and performance prior to vehicle operation, refer to the sensor manual.

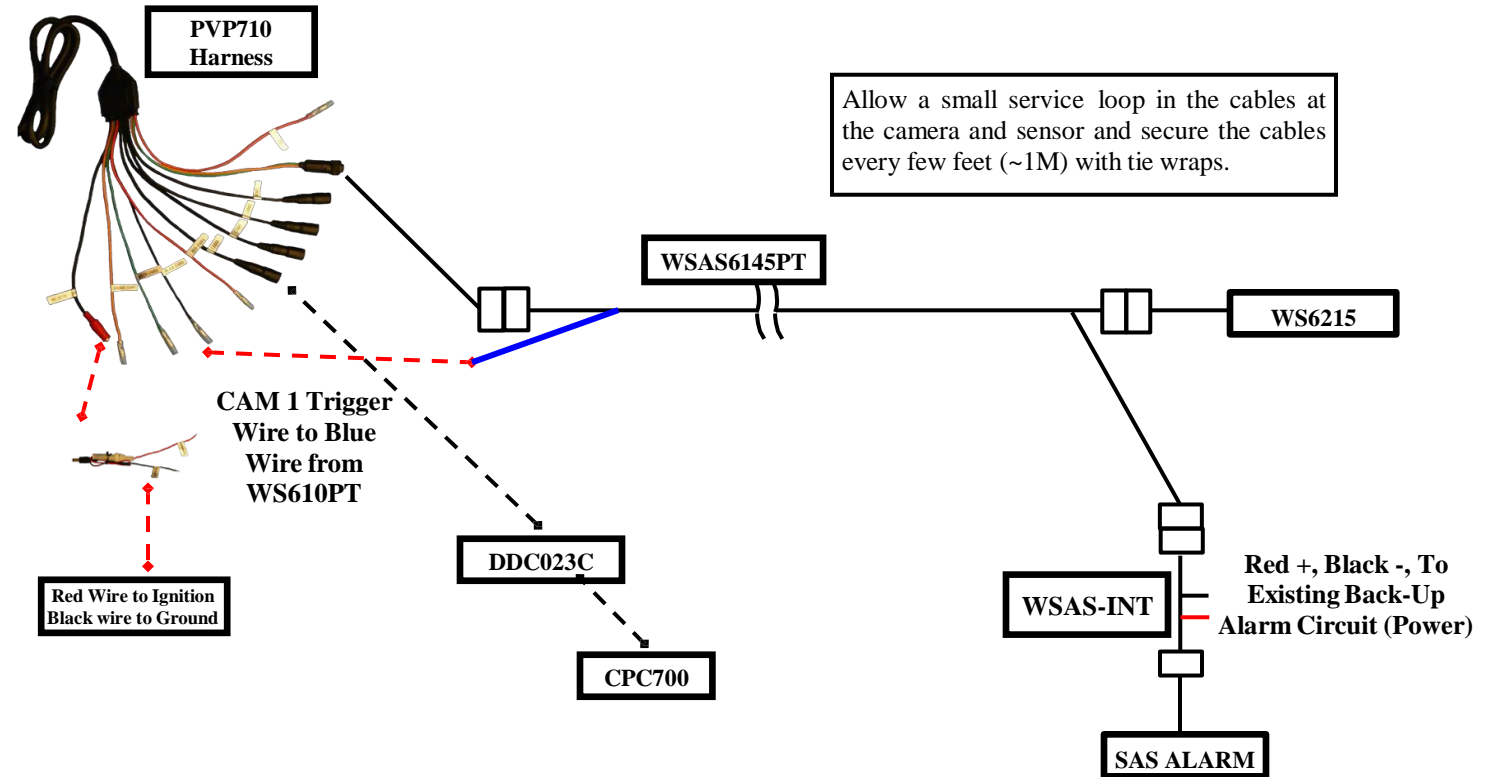

MONITOR OVERLAY GRAPHICS

- SENSOR POWER / NO DETECTION
- NO SENSOR COMMUNICATION
- DETECTING OBJECTS

Reference Monitor Manual for additional information

